2.Exploded Views and Parts List

2-1 Cassette Deck

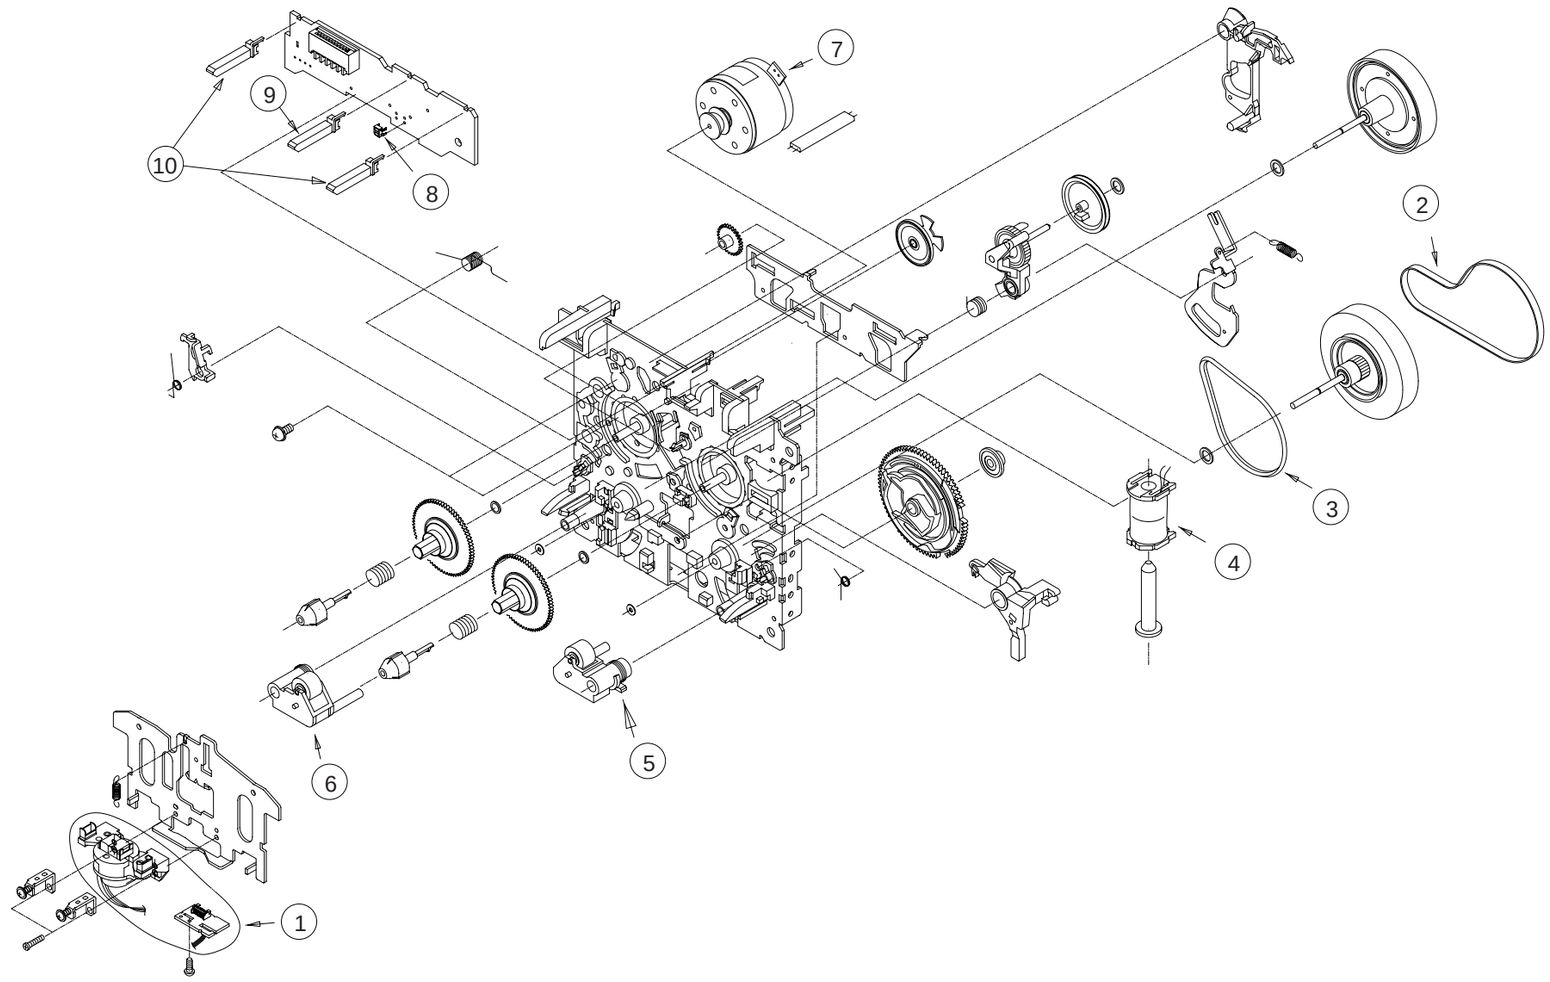

No.	Code No.	Description	Specification	Remarks
	AH59-01087A	DECK -CASSETTE	CMAL1Z230A	DC 12V
1	AH81-00543A	R/P HEAD ASS'Y	HADKH5655A	F513-853
2	AH81-00733A	MAIN BELT	MAIN BELT	
3	AH81-00543C	F/R BELT	FF19S-31	FF19S-31
4	AH81-00543D	SOLENOID	F765-292	F765-292
5	AH81-00543E	ROLLER PINCH BLK R	F514-129	F514-129
6	AH81-00543F	ROLLER PINCH BLK L	F514-130	F514-130
7	AH81-00734A	MOTOR	CCM09-120L-1-2	
8	AH81-00543H	REEL SENSOR	SG-107F3;KODENSHI	
9	AH81-00543J	LEAF S/W - WHITE	SPLFF	
10	AH81-00543K	LEAF S/W - BLK	SPLFE1	

2-2 Total Exploded View and Parts List

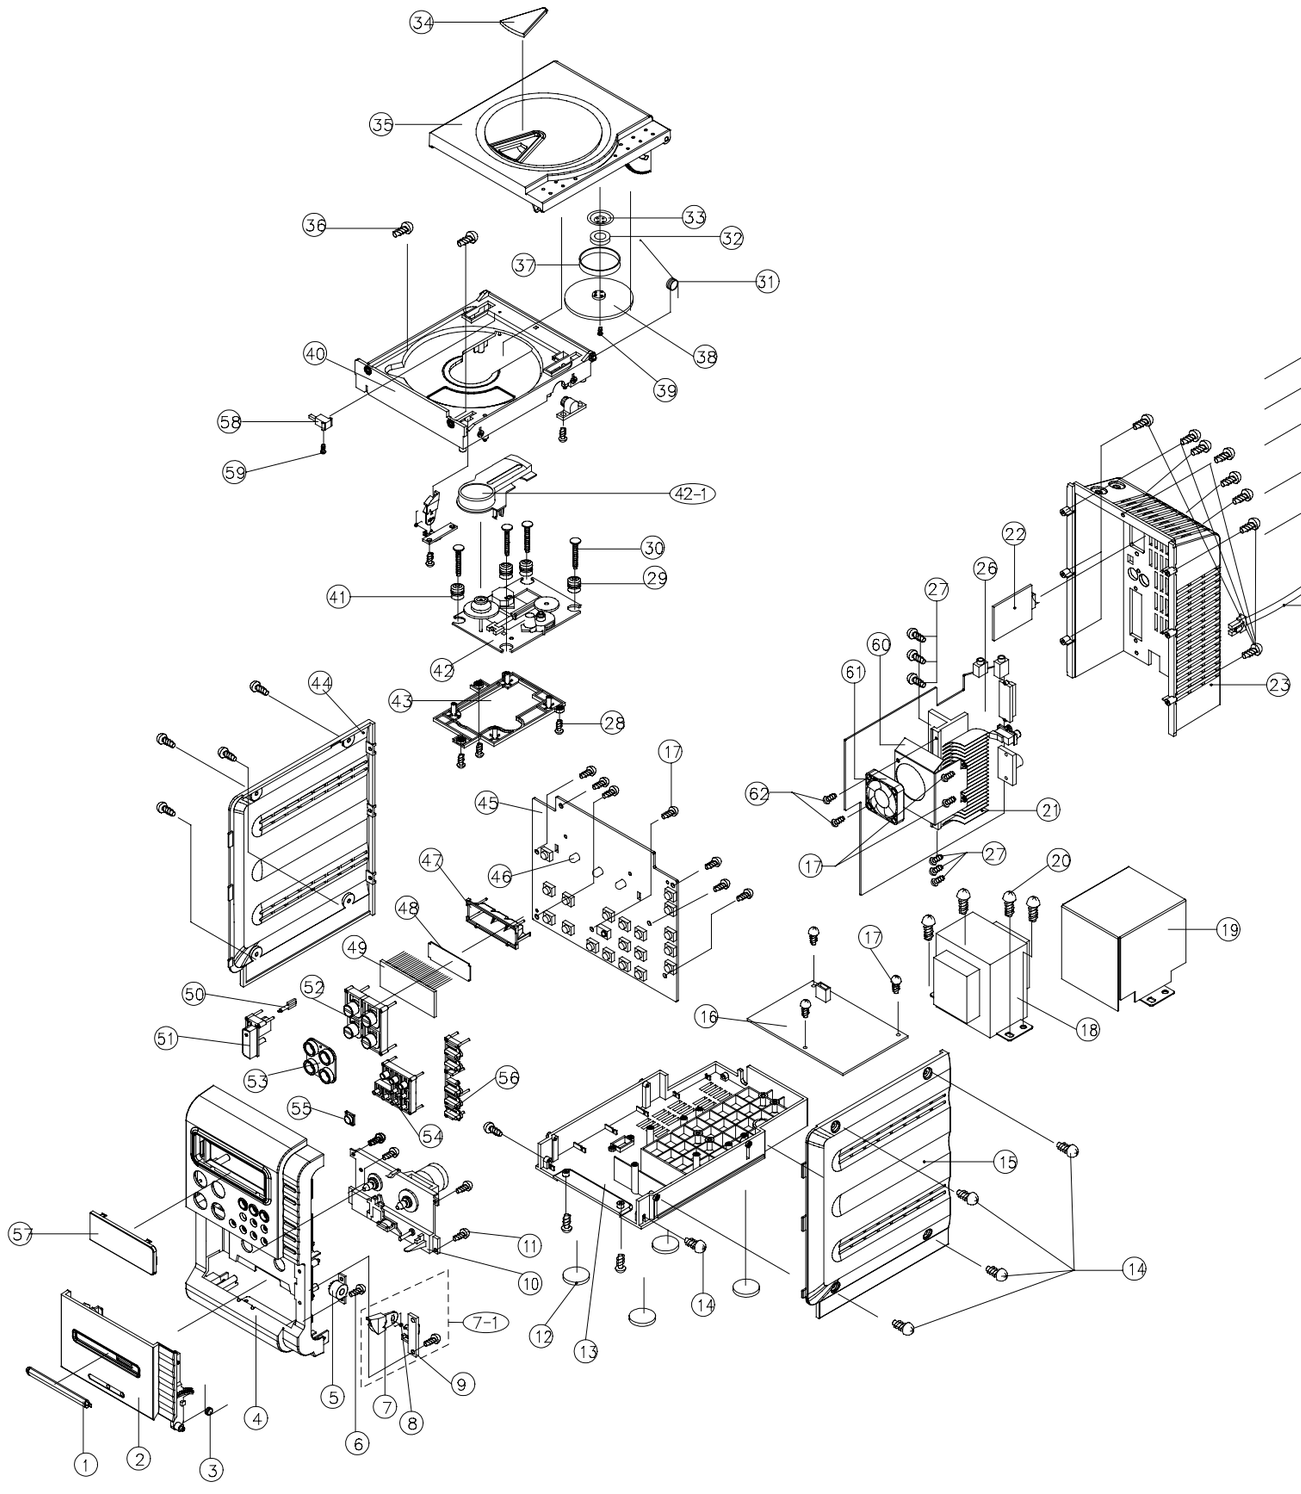

*** Parts List :**

No.	Code No.	Description	Specification	Q'TY	Remark
1	AH81-00552U	LENS CASS	0101-46488-00 PMMA HALF MIRROR,HBL-2267S	1	
2	AH81-00553D	CASS DOOR	0101-46475-00 ABS MOLD.COL.SPY.HLS-2050P	1	
3	AH81-00551X	CASS DOOR SPRING	0102-43993-00 SWIC-F	1	
4	AH81-00555E	CABINET FRONT	0101-46470-00 HIPS MOLD.COL.SPY.HLS-2050P	1	
5	AH61-80030A	DAMPER ASS'Y	0101-46178-00	2	
7-1	AH95-50001A	LATCH ASS'Y	HOOK + HOOK SPRING	1	
7	AH81-00384T	HOOK	0101-45627-00 ABS MOLD.BLK	2	
8	AH81-00385J	HOOK SPRING	0102-43847-00 Dia.0.3mm MUSIC WIRE	2	
9	AH81-00384U	HOOK BRACKET	0101-45628-00 ABS MOLD.BLK	2	
10	AH59-01087A	CASS DECK	CMAL1Z230A (AUTO-REVERSE)	1	
12	AH81-00551C	RUBBER FOOT	0109-40485-00 Dia9.6x2.5mm	4	
13	AH81-00556C	CABINET BOTTOM	0101-46476-00 HIPS MOLD.COL.SPY	1	
15	AH81-00557G	CABINET SIDE R	0101-46478-00 HIPS MOLD.COL.DARK GREY HDG-2269R	1	
21	AH81-00551U	HEAT SINK	0102-43992-00 ALUMINIUM	1	
23	AH81-00558D	CABINET REAR	0101-46471-00 HIPS MOLD.COL.SPY	1	
29	AH81-00454D	VIBR. PROOF RUBBER	0109-40360-01 RED COLOR (3-910-095-01)	2	
31	AH81-00551Z	CD DOOR SPRING	0102-44053-00 SWIC-F	1	
32	AH81-00398H	MAGNET FORCE	0110-40867-00 Dia.30x17.9x5mmTHK	1	
33	AH81-00384Y	CHUCKING PLATE (A)	0102-31274-00 DIA. 40mm 0.6mmTHK MILD STEEL	1	
34	AH81-00552W	LENS CD DOOR	0101-46487-00 PMMA MOLD.COL.SPY.W/HBL-2267S	1	
35	AH81-00559R	CD DOOR	0101-46472-04 MM-ZB5,ABS	1	MM-ZB5
35-1	AH81-00559S	CD DOOR	0101-46472-05 MM-ZB59,ABS	1	MM-ZB59
37	AH81-00384S	CHUCKING RING	0101-45620-00 ABS MOLD.BLACK	1	
38	AH81-00384R	CHUCKING PLATE(B)	0101-32546-02 Dia.70mm-ABS+FIBRE-GLASS(20%)	1	
40	AH81-00560D	CD CHASSIS	0101-46473-00 HIPS MOLD.COL.SPY	1	
41	AH81-00454E	VIBR. PROOF RUBBER	0109-40361-01 GREEN COLOR (3-910-095-11)	2	
42	AH81-00568R	CD MECHA	0115-6MML4-00,B31TG6U,CMS-P31)	1	
42-1	AH61-20529A	CAP PICK-UP	ABS BLACK, RCD-390	1	
43	AH81-00554D	CD DECK HOLDER	0101-46474-00 HIPS MOLD.COL	1	
44	AH81-00557H	CABINET SIDE L	0101-46477-00 HIPS MOLD.COL.DARK GREY HDG-2269R	1	
46	AH81-00551F	CAP LAMP	0109-40486-00 SILICON RUBBER	3	
47	AH81-00551G	HOLDER LCD	0101-45922-00 PBT WHITE	1	
48	AH81-00911D	LCD SHEET	0103-40953-00 PVC	1	
49	AH81-00905J	LCD DISPLAY	0347-40144-40 76x27x1.1mm 38 PIN(B5/B3)	1	
50	AH81-00552V	LENS POWER	0101-46485-00 PMMA MOLD.COL.SPY	1	
51	AH81-00561L	KNOB POWER	0101-46479-00 ABS MOLD.COL.SPY.HLS-2050P	1	
52	AH81-00561J	KNOB FUNCTION 1	0101-46480-00 ABS MOLD.COL.SPY.HWH-2270P MILKY	1	
53	AH81-00562N	DECO KNOB.	0101-46484-00 PMMA W/PLATING	1	
54	AH81-00561H	KNOB FUNCTION 2	0101-46481-00 ABS MOLD.COL.SPY.HLS-2050P	1	
55	AH81-00551Y	REMOTE LENS	0101-46486-00 PMMA MILKY	1	
56	AH81-00561K	KNOB VOLUME	0101-46482-00 ABS MOLD.COL.SPY.HLS-2050P	1	
57	AH81-00911A	LCD	0101-46489-00 PMMA MOLD.HBL-2266R	1	
58	AH81-00551V	QUICK ACTION SWITCH	0323-60208-01 LS-323-0 (1P2T)	1	
60	AH81-00911C	FAN BRACKET	0102-44033-00 SECC-T(SBAP) T=1mm	1	
61	AH81-00911B	FAN DC	0200-00001-00 50x50x10mm, 12V DC 0.75W	1	

2-3 CD DECK Exploded View and Parts list

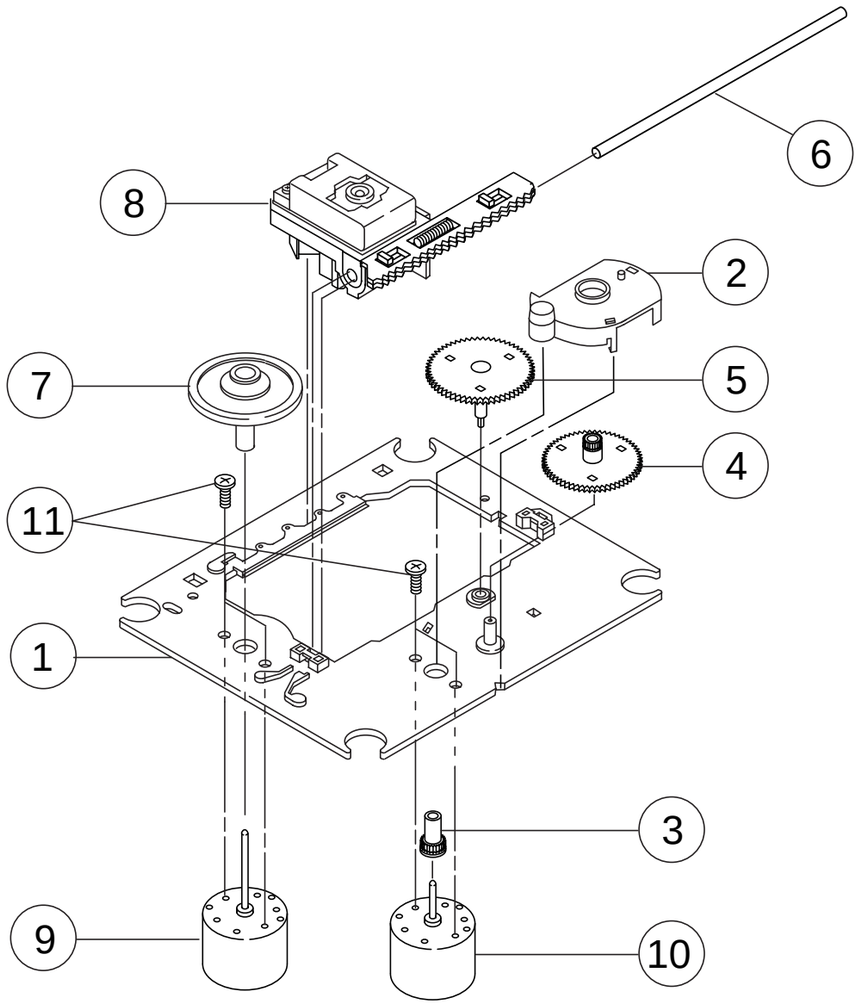

No.	Code No.	Description	Specification	Remarks
	AH81-00568R	**CD MECHA**	**P31TG6U(CMS-P31)**	
1	AH81-00635A	CHASSIS-DECK(M)	AJ70-00601E	
2	AH81-00635D	COVER-GEAR	AJ66-00601G	
3	AH81-00635B	GEAR(A)	AJ66-00601D	
4	AH81-00635E	GEAR(B)	AJ66-00601B	
5	AH81-00635F	GEAR(C)	AJ66-00601F	
6	AH81-00635G	SHAFT-PU	AJ70-00601A	
7	AH81-00635H	TURN-TABLE(T)	AJ72-00602A	
8	AH81-00635J	SOH-AA	AJ75-00601F	
9	AH81-00635K	MOTOR-SPINDLE	AJ31-00601C	
10	AH81-00635C	MOTOR-FEED	AJ31-00601A	
11	AH81-00635L	SCREW-PH	AJ60-00601D	

2-4 SPEAKER Exploded View and Parts list

2-4-1 MM-ZB5

* CAUTION : It is used the bonding, connect FRONT PANEL to CABINET WOODEN.
So when the disassembly, take extreme care not to demage the SPEAKER.

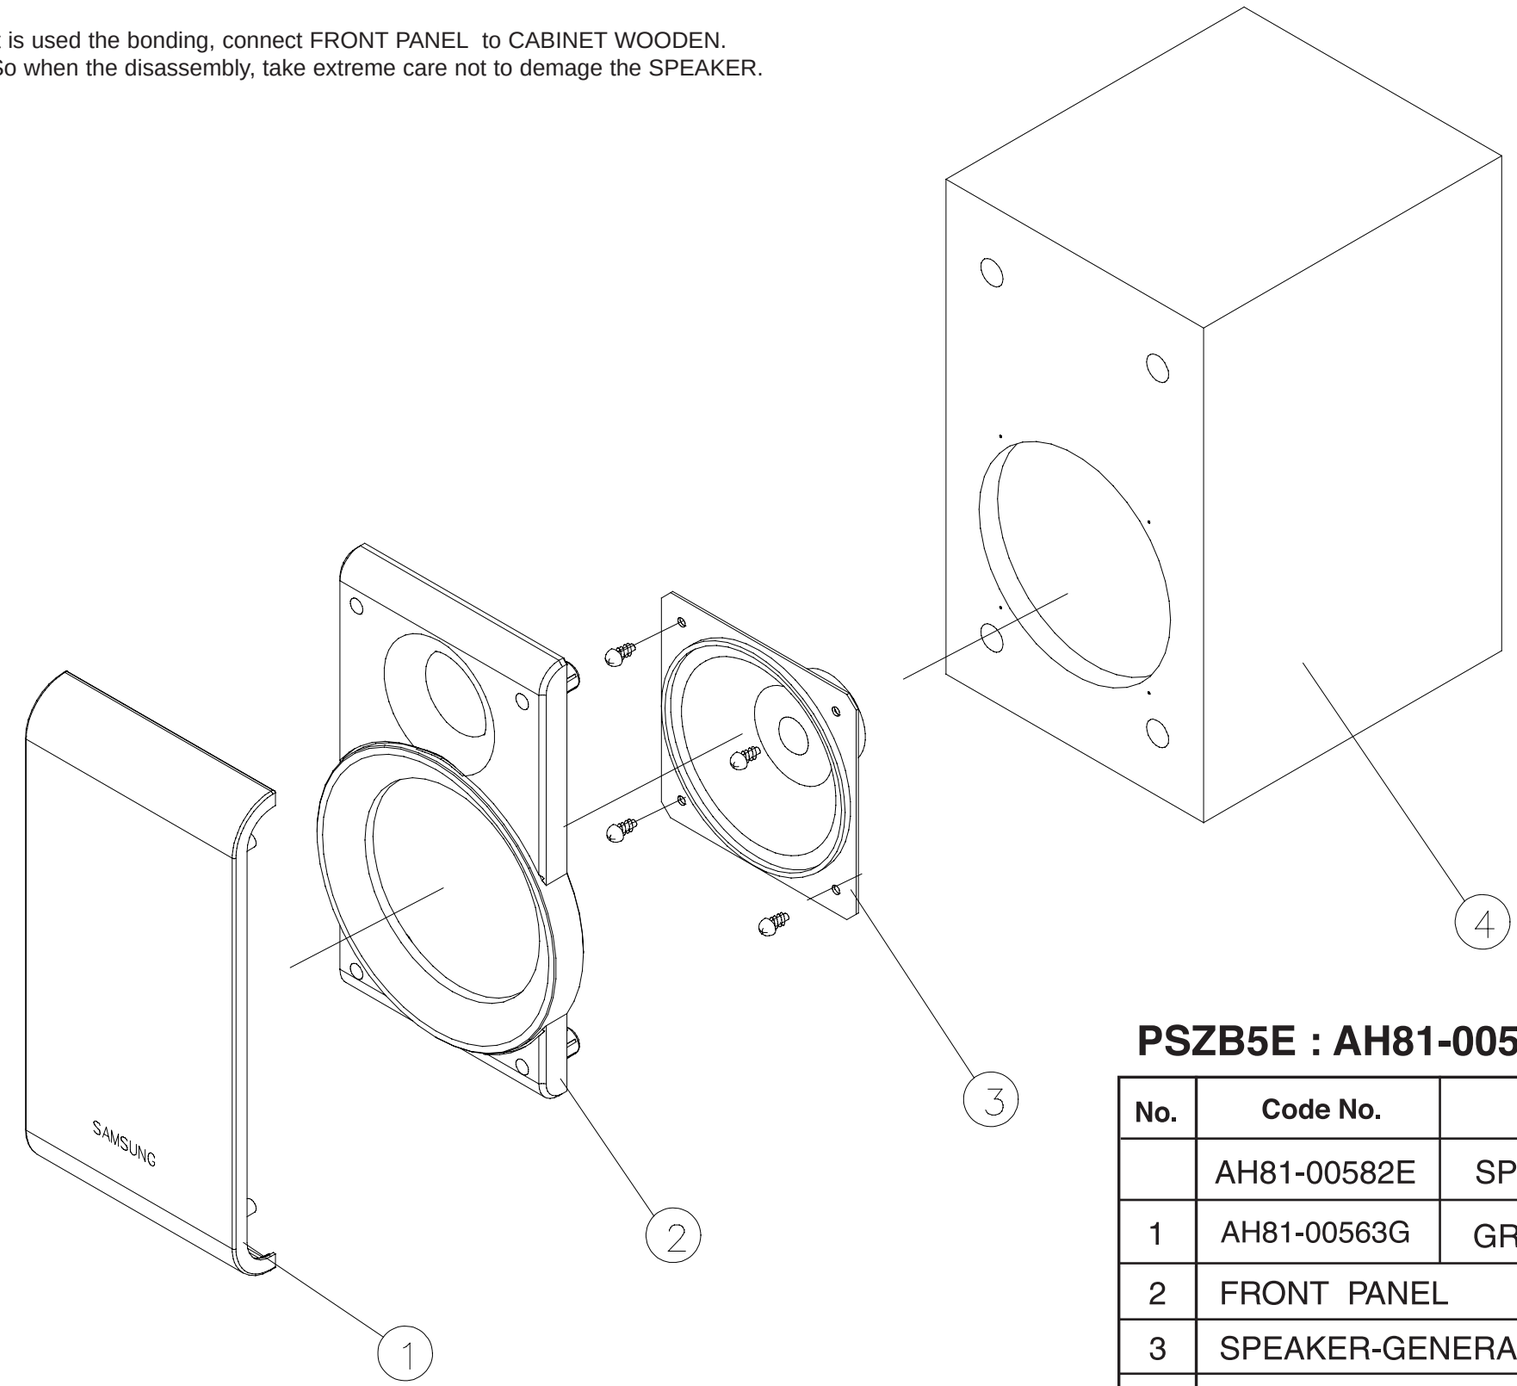

PSZB5E : AH81-00580E

No.	Code No.	Description	Q'ty
	AH81-00582E	SPEAKER ASS'Y	2
1	AH81-00563G	GRILLE ASS'Y	2
2	FRONT PANEL		2
3	SPEAKER-GENERAL		2
4	CABINET WOOD		2

* CAUTION : When the disassembly, take extreme care not to demage the SPEAKER.

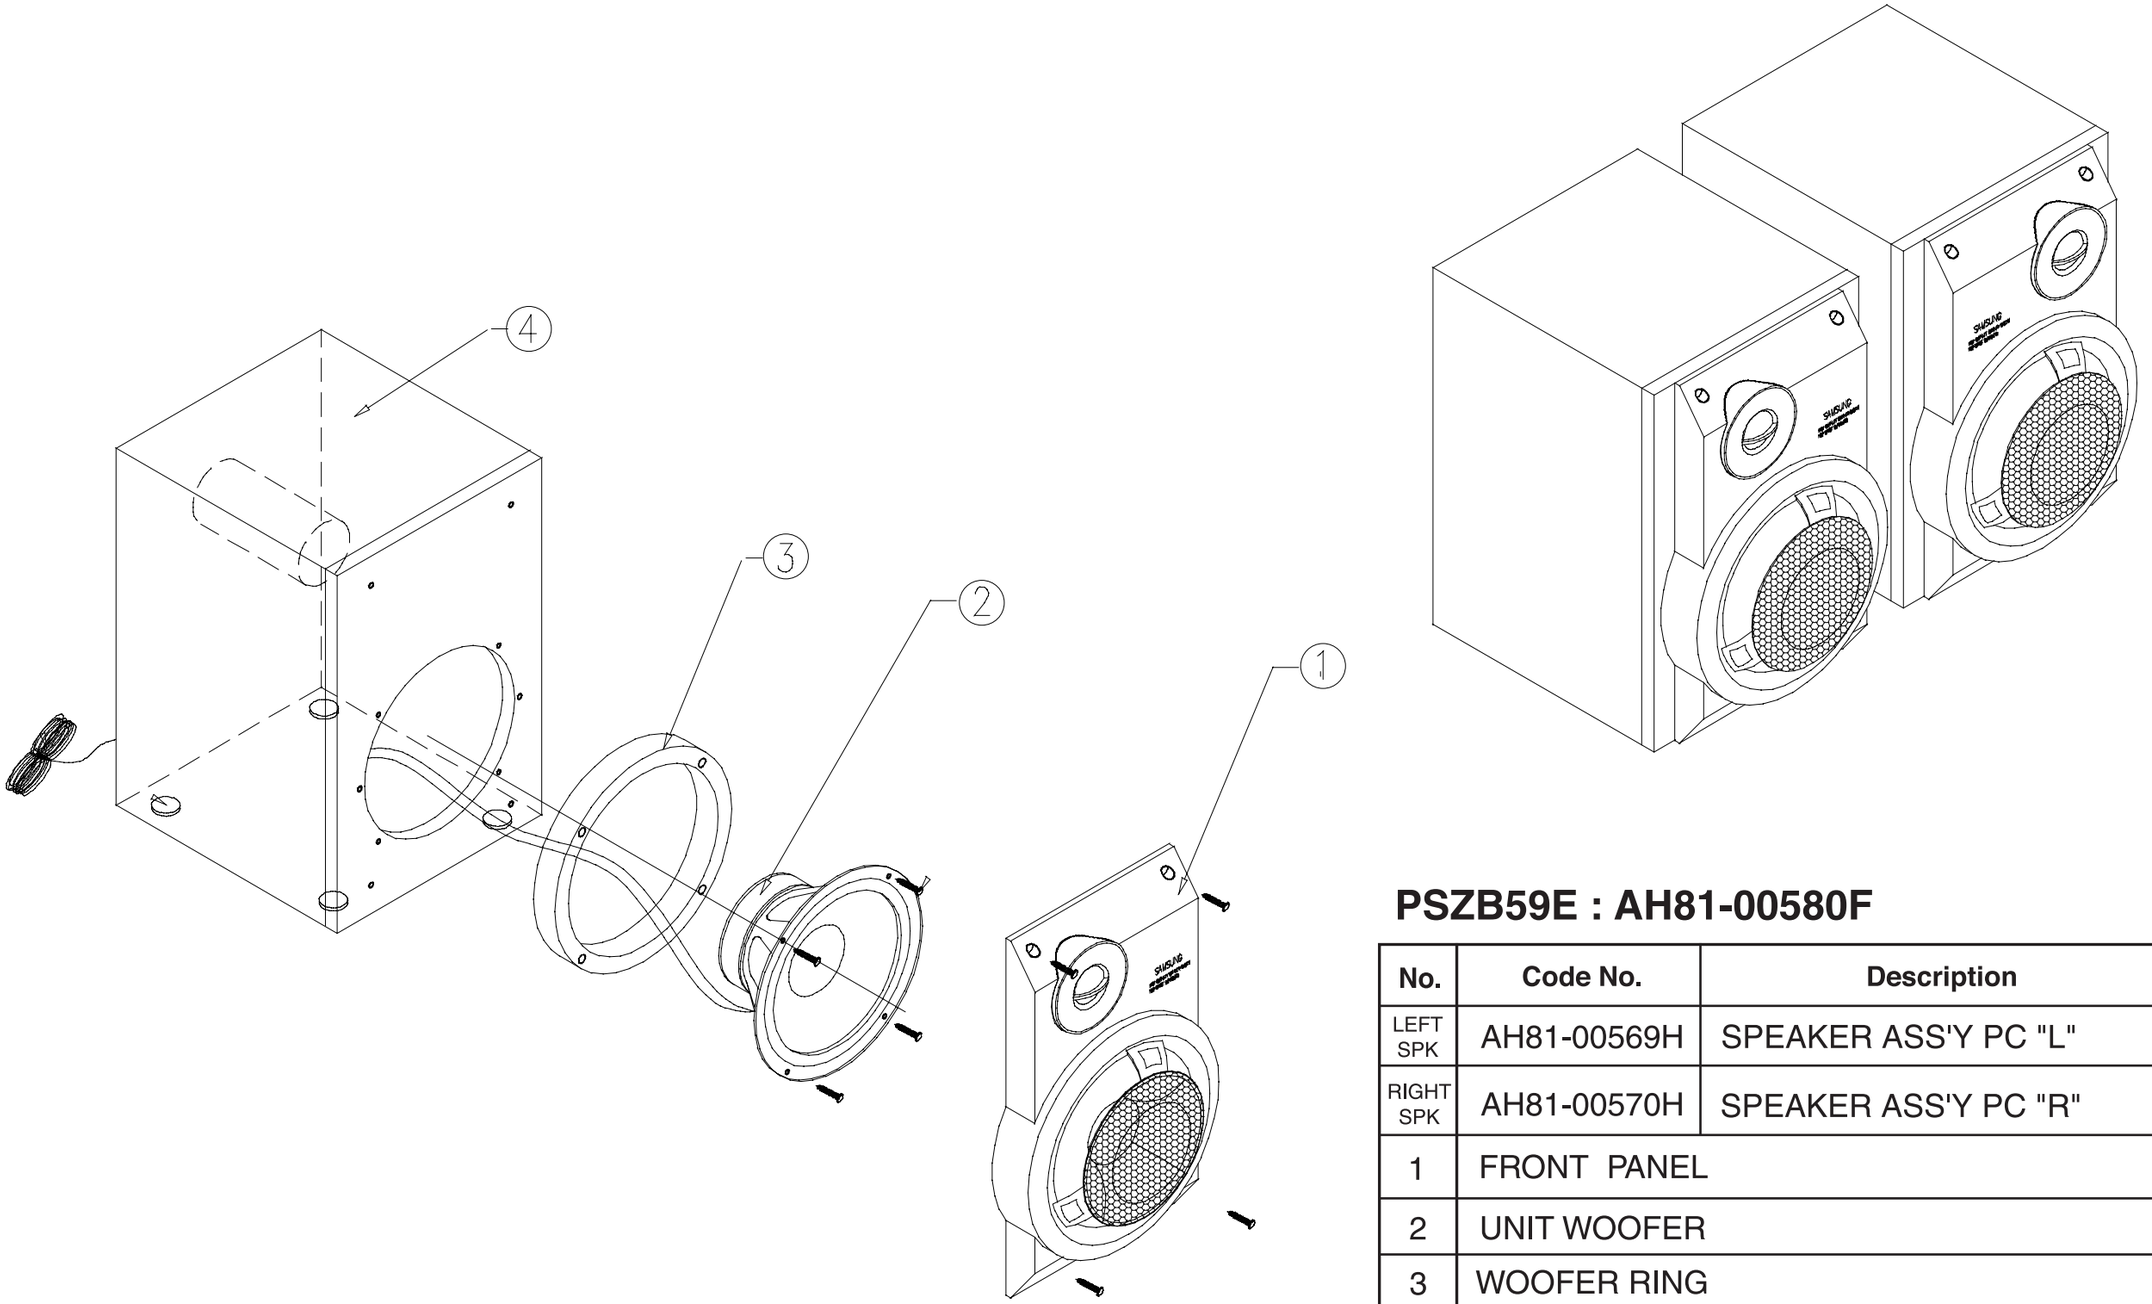

PSZB59E : AH81-00580F

No.	Code No.	Description	Q'ty
LEFT SPK	AH81-00569H	SPEAKER ASS'Y PC "L"	1
RIGHT SPK	AH81-00570H	SPEAKER ASS'Y PC "R"	1
1	FRONT PANEL		2
2	UNIT WOOFER		2
3	WOOFER RING		2
4	CABINET WOOD		2